

ETH-FIBER-SM
10/100M Ethernet To Fiber Optic
Single Mode Converter
Datasheet Revision 2.3



GENERAL FEATURES:

- Plug-and-Play (hot-pluggable)
- Externally Powered
- Fiber optic range of up to 12.4 miles (20 km)
- Available with ST or SC type connectors
- Data direction auto-turnaround - no flow control necessary
- Built-in surge and static protection
- 5 year manufacturer's warranty
- RoHS, CE, and FCC certified

DESCRIPTION:

The SerialComm ETH-FIBER-SM is a bi-directional externally powered 10/100M Ethernet to Single Mode Fiber Optic Converter which converts a standard 10/100BaseTX to 100BaseFX Single Mode SC or ST connector type fiber optic link. A data direction auto-turnaround feature automatically enables the Ethernet transmit and receive data signals when data is present, avoiding the need for software drivers, and making the device fully plug-and-play. The ETH-FIBER-SM supports straight-through (MDI) or crossover (MDX) cable configurations. The ETH-FIBER-SM has a RJ45 connector for the 10/100M Ethernet port, and either an ST type or SC type connector for the fiber optic link. The unit extends the maximum distance of any 10/100M Ethernet signal up to 12.4 miles (20 km) using SM fiber optic cable. The unit is enclosed in a rugged steel housing. An external power supply is included.

CERTIFICATIONS:



APPLICATIONS:

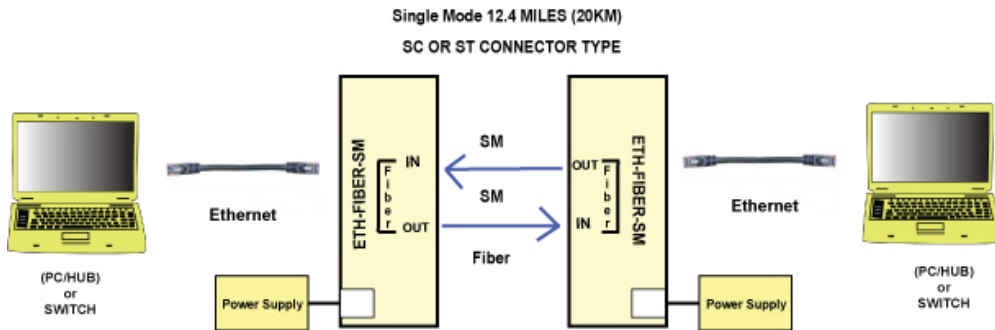


FIGURE 1: EXTENDING 10/100M ETHERNET DATA DISTANCE

SPECIFICATIONS:

| COMMUNICATION | |
|-----------------------------|---|
| STANDARDS: | IEEE 802.1 10Base-T, IEEE 802.3u 100Base-T and IEEE 802.3 100Base-FX Standards |
| MODEL NUMBERS: | ETH-FIBER-SM-ST - ST Connector Version ETH-FIBER-SM-SC - SC Connector Version |
| BAUD RATES: | 10/100 mbps Half-duplex, 20/200 mbps Full-duplex |
| CONNECTOR TYPES: | DC Input: Male Jack, Ethernet Side: RJ45 Female and Fiber Side: either 2 X ST Connectors or 2 X SC Connectors |
| DISTANCE: | 10BaseT or 100BaseT Side: 328 ft (100m) and Single Mode Side: 12.4 miles (20 km) |
| CABLING: | CAT 3, 4, or 5 |
| ELECTRICAL | |
| POWER SOURCE: | 5VDC |
| DC/AC POWER ADAPTER: | Included 5VDC / (100 - 240VAC 50/60hz US Type A Plug) 500 mA |
| POWER CONSUMPTION: | 4 Watts |
| STATIC PROTECTION: | 15KV Electric Static Discharge (ESD) Protection |
| SURGE PROTECTION: | 600W/Sec Surge Protection |
| FIBER OPTIC | |
| FIBER OPTIC CABLING: | Compatible with Single Mode: 8.3/125um, 8.7/125um, 9/125um or 10/125um Fiber Optic Cable |
| WAVELENGTH: | 1310nm |
| MECHANICAL | |
| HOUSING: | Heavy Duty Steel Housing |
| DIN RAIL: | Optional DIN Rail Mounts |
| WEIGHT: | With ST Connector: 8.11oz (230.0 grams) With SC Connector: 7.82oz (221.6 grams) |
| DIMENSIONS: | With ST Connector: 4.30" X 3.75" X 1.05" (109.0 mm X 95.0 mm X 26.6 mm) With SC Connector: 3.90" X 3.75" X 1.05" (99.0 mm X 95.0 mm X 26.6 mm) |
| ENVIRONMENTAL | |
| OPERATING TEMP: | -4° F to 167° F (-20°C to 75° C) |
| STORAGE TEMP: | -40° F to 185° F (-40°C to 85° C) |
| OPERATING HUMIDITY: | 5% To 95% - No Condensation |
| QUALITY | |
| PRODUCT SAFETY: | CE, FCC and RoHS Conformance Certified |
| QUALITY MANAGEMENT | Manufactured and Distributed to ISO 9001:2008 |
| RELIABILITY: | Low Failure Rate – 99+% Reliability Since Inception |
| WARRANTY: | 5 Year Replacement Warranty |

ETHERNET RJ45 PIN ASSIGNMENT:

| PIN NUMBER | MDI SIGNAL | MDI-X SIGNAL |
|------------|---------------|---------------|
| 1 | TX+ | RX+ |
| 2 | TX- | RX- |
| 3 | RX+ | TX+ |
| 6 | RX- | TX- |
| 4 | Not Connected | Not Connected |
| 5 | Not Connected | Not Connected |
| 7 | Not Connected | Not Connected |
| 8 | Not Connected | Not Connected |

INDICATOR LED TABLE:

| LED | STATE | INDICATION |
|--------------|----------|--|
| PWR | OFF | Power Off |
| | SOLID | Power On |
| 100 | OFF | 10M Ethernet |
| | SOLID | 100M Ethernet |
| FX | OFF | Fiber Optic Unit is Faulty |
| | SOLID | Fiber Optic Unit is Functional |
| LNK/ACT (TX) | OFF | Ethernet is Not Connected |
| | FLASHING | Transmitting or Receiving Data |
| | SOLID | Ethernet is Connected |
| LNK/ACT (FX) | OFF | Fiber Links are not Connected |
| | FLASHING | Transmitting or Receiving Data |
| | SOLID | Fiber Links are Connected |
| FDX | OFF | Half-Duplex Mode or Network Disconnected |
| | FLASHING | Data Collision Detected |
| | SOLID | Full-Duplex Mode |

TROUBLESHOOTING INSTRUCTIONS:

Using one ETH-FIBER-SM unit:

- Perform a loop back test on one unit:
 - Plug the power connector to the converter.
 - Connect the Ethernet port to a PC. Connect fiber in to fiber out.
 - Running a Ethernet Analyzer program on the PC, send ASCII characters to the ETH-FIBER-SM converter from one PC port, and check that the characters are received at the same PC port. This tests that the transmit and receive functions of the ETH-FIBER-SM unit is working properly.

Using two ETH-FIBER-SM units:

- Check that all connections comply with the connection diagrams.
- Perform a loop back test on two units:
 - Plug the power connector to both converters.
 - Connect the fiber optic in of one converter and fiber optic out to the other converter.
 - Connect the fiber optic out of one converter and fiber optic in to the other converter.
 - Connect the Ethernet connections to two Ethernet ports.
 - Running Ethernet Analyzer programs on both PCs, send ASCII characters to the ETH-FIBER-SM converter from one PC port, and check that the characters are received at the 2nd PC port. Repeat the test in the opposite direction. This tests that the transmit and receive functions of both ETH-FIBER-SM units are working properly.

DIMENSIONS:

